


# **560\*\*\* Switch Instructions**

The 560 and 561 Series missile switches come with a lighted LED toggle switch. They can be run with or without the functioning LED.


## **MAX 20A**

A relay should be used for any application over 10A

#### To run with the LED (12V+activation only):

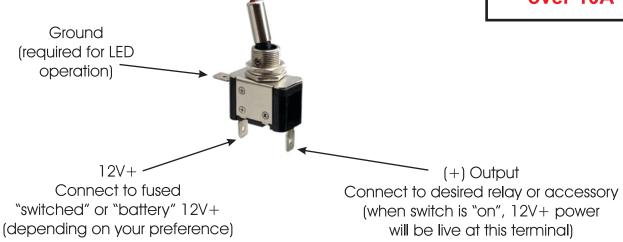

### To run WITHOUT the LED (12V+activation):

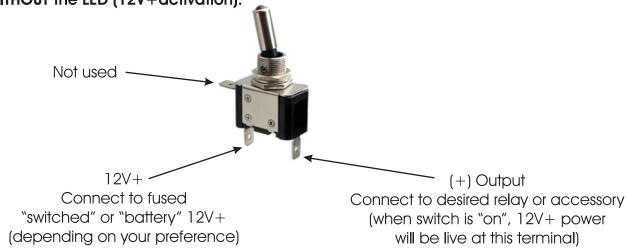

#### To run WITHOUT the LED (- ground activation):

