


## **322\*\*\* Switch Instructions**

Use "Normally Open" connections to "close" or "connect" a circuit when the button is pressed. Use "Normally Closed" connections to "open" or "disconnect" a circuit when the button is pressed.

19mm Switches 322100 to 322103 322110 to 322113 322300 to 322303 322310 to 322313



MAX 5A


Must use
a relay for all
applications

\*Note: The LED connections ARE polarity sensitive on the 19mm switches.

Please note the markings on the switch + = (LED Positive+) and - = (LED Negative-)

- C & NC (Normally "Closed" or "Connected" Circuit)
- C & NC ("Open" or "Disconnected" Circuit when latched or pressed)
- C & NO (Normally "Open" or "Disconnected" Circuit)
- C & NO ("Closed" or "Connected" Circuit when latched or pressed)


22mm Switches 322200 to 322203 322210 to 322213 322400 to 322403 322410 to 322413





\*\*Note: The LED connections are NOT polarity sensitive on the 22mm switches (one is to be a positive connection and the other is to be a negative connection).


- 1 & 2 (Normally "Closed" or "Connected" Circuit)
- 1 & 2 ("Open" or "Disconnected" Circuit when latched or pressed)
- 3 & 4 (Normally "Open" or "Disconnected" Circuit)
- 3 & 4 ("Closed" or "Connected" Circuit when latched or pressed)


The "LED" can be wired to illuminate upon button activation, or be wired to remain on all the time. See Diagram below.

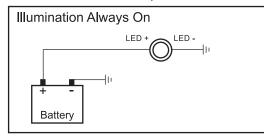


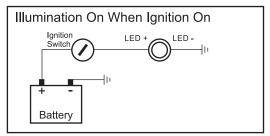

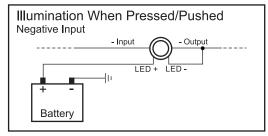

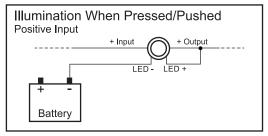

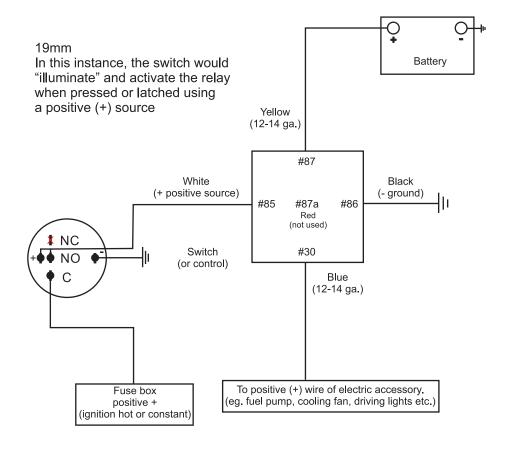

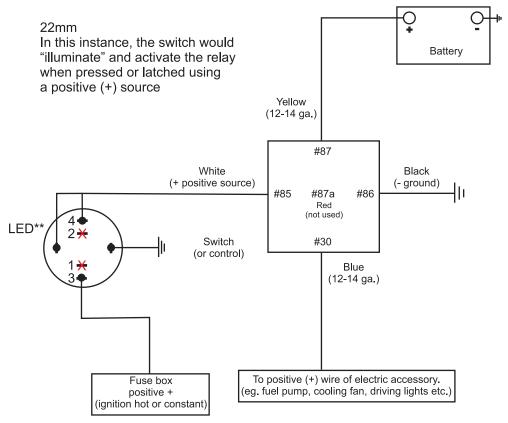

\*\*Note: The LED connections are NOT polarity sensitive on the 22mm switches (one is to be a positive connection and the other is to be a negative connection)